# QUICK COUPLERS

### Quick Coupler (patented)

This quick coupler is designed for use during pressure testing, where there is a need for changing pressure "hook-ups" similar to the use of electrical clip leads. They can be used with random lengths of stainless tubing (ends must be chamfered). Model QC063-2 quick coupler will operate up to 1000 psi.

#### Use:

- To connect, push smooth end of tubing into coupler. Tubing is now sealed with a captured internal O-ring and mechanically held by the collet which is initially closed by spring force. When the coupler is pressurized, an internal piston applies additional closing force to the collet.
- 2. To disconnect, shut off air supply then depress the collet.

### **Quick Coupler Designs**

#### Model-QC-XXX-2

The Model-2 quick coupler design incorporates 2 collets in order to accept a steel tubulation at each end.

#### Model-QC-XXX-TH

The Model-TH quick coupler design incorporates a collet at one end and a threaded nose at the other end.

#### Model-QC-XXX-TUBNXXX

The Model-TUBN quick coupler design incorporates a collet at one end and a 1/16 or 1/8 inch tubulation on the other end.

#### ScanCo No. TUBN-XXX-X

See Bulged Stainless Steel Tubulations page 3.

**Caution:** Do not push bulged end of tubulation into coupler.

A chamfered edge is required.



## QUICK COUPLER ORDERING INFORMATION

For Use on Tubing			
To Order, Specify	ScanCo #	.063 O.D.	.125 O.D.
Collet Each End	Model-2	QC063-2	QC125-2
Thread One End Tube One End	Model-TH Model-TUBN	QC063-TH8 QC063-TUBN063	QC125-TH25 QC125-TUBN125

## **PNEUMATIC CALIBRATION/PURGE VALVE**

This is a 3-way 8 channel(8P-3T) pneumatic logic valve ideal for calibrating up to 8 individual pressure transducers of similar pressure range. A 90–120 psi control pressure is required to switch the valve from the default measurement mode, to the calibration, purge or isolate mode. In the calibra-

tion mode, input pressures are isolated, allowing the user to apply a calibration to the 8 sensors that are manifolded together. The purge mode allows a purge pressure to be input and purge condensation or contamination back through the input tubes. Order Information: ZOCCAL/ADPT



#### **Dimension Inches (mm)**





